

Marantz Remote Command Chart

Last Update: October 3, 2012

Item: Blu-ray/Universal disc Player

BD2 (28) Codes

Remote Code: RC-5/RC-5

		Command Name	System	Command	Extension	UD7007	UD5007	FUNCTION
Power	1	Power On/Off	28	12	00	X	X	Turn the power On/Standby toggle
	2	Power On	28	12	01	@ (*1)	@ (*1)	Turn the power On
	3	Power Off(Standby)	28	12	02	@ (*1)	@ (*1)	Turn the power Off (Standby)
Basic Playback	4	Open/Close	28	45	00	X	X	Open Tray and Close Tray (Toggle action)
	5	Play	28	53	00	X	X	Playback
	6	Stop	28	54	00	X	X	Stop
	7	Pause	28	48	00	X	X	Pause
	8	Next	28	32	00	X	X	>> Select Next Track/Chapter
	9	Previous	28	33	00	X	X	<< Select Previous Track/Chapter
	10	FF	28	52	00	X	X	>> Fast Forward
	11	REW	28	50	00	X	X	<< Fast Rewind
Trick Playback	12	Random	28	28	00	X	X	Enter to Random Playback
	13	Repeat	28	29	00	X	X	Enter to Repeat Playback
	14	Program/Direct	28	41	00	X	X	Enter to Program mode
	15	A-B Repeat	28	59	00	X	X	Select A and B point for A-B repeat playback
	16	Call	28	84	00	X	X	Confirm the program
	17	DVD A PAGE	28	121	00	X	X	To see next page
18	Zoom	28	126	00	---	---	Enter to Zoom mode	
Menu/Cursor	19	Cursor UP	28	80	00	X	X	Select UP
	20	Cursor DOWN	28	81	00	X	X	Select DOWN
	21	Cursor LEFT	28	85	00	X	X	Select LEFT
	22	Cursor RIGHT	28	86	00	X	X	Select RIGHT
	23	ENTER	28	87	00	X	X	Select Enter
	24	Top Menu	28	82	00	X	X	Go to Top Menu
	25	Pop up Menu/Menu	28	14	00	X	X	Go to Menu / Select Pop up Menu
	26	Setup	28	42	00	X	X	Enter to Setup Menu
27	Return	28	79	00	X	X	Go to Previous Menu	
Color Key	28	RED	28	107	00	X	X	Select RED item
	29	GREEN	28	108	00	X	X	Select GREEN item
	30	BLUE	28	110	00	---	---	Select BLUE item
	31	YELLOW	28	109	00	---	---	Select YELLOW item
10key	32	0	28	00	00	X	X	Numeric Key
	33	1	28	01	00	X	X	Numeric Key
	34	2	28	02	00	X	X	Numeric Key
	35	3	28	03	00	X	X	Numeric Key
	36	4	28	04	00	X	X	Numeric Key
	37	5	28	05	00	X	X	Numeric Key
	38	6	28	06	00	X	X	Numeric Key
	39	7	28	07	00	X	X	Numeric Key
	40	8	28	08	00	X	X	Numeric Key
	41	9	28	09	00	X	X	Numeric Key
42	+10	28	10	00	X	X	To enter over 2 digit track/chapter	
Advanced	43	DISC LAYER	28	47	00	X	X	Select the Disc Layer mode
	44	Clear	28	49	00	X	X	Cancel
	45	Search Mode	28	51	00	X	X	Enter to Search Mode
	46	Subtitle	28	64	00	X	X	Select Subtitle
	47	Audio	28	65	00	X	X	Select Audio Track
48	Angle	28	66	00	X	X	Select Angle type	
Other	49	INFO	28	15	00	X	X	Select INFO Mode
	50	Picture Adjust	28	18	00	X	X	Enter to Picture Adjust Mode
	51	Pure Direct	28	40	00	X	X	Enter to Pure Direct Mode
	52	OPTION	28	44	00	X	X	Select OPTION
	53	Dimmer	28	71	00	X	X	Select Display Brightness
	54	VIDEO RESOLUTION	28	123	00	X	X	Select HDMI output resolution
	55	HDMI Mode	28	123	01	---	---	Select HDMI output mode
	56	HOME	28	63	01	X	X	Enter to Home Menu
	57	YouTube	28	112	00	X	X	Connect to YouTube
	58	NETFLIX	28	113	00	X	X	Connect to NETFLIX
	59	Vudu	28	114	00	X	X	Connect to Vudu
	60	Hulu	28	115	00	X	X	Connect to Hulu
Remarks Specifications subject to change without prior notice. X : Available for the model *1 @: The unit works with the code. But the supplied remote doesn't have the button. --- : Not available *How to change BD1 or BD2 codes: Please refer each model's User Manual								